


Installation for Internal Thread Handlebar

Installation for RIGHT Side.

Repeat for LEFT side with applicable parts.

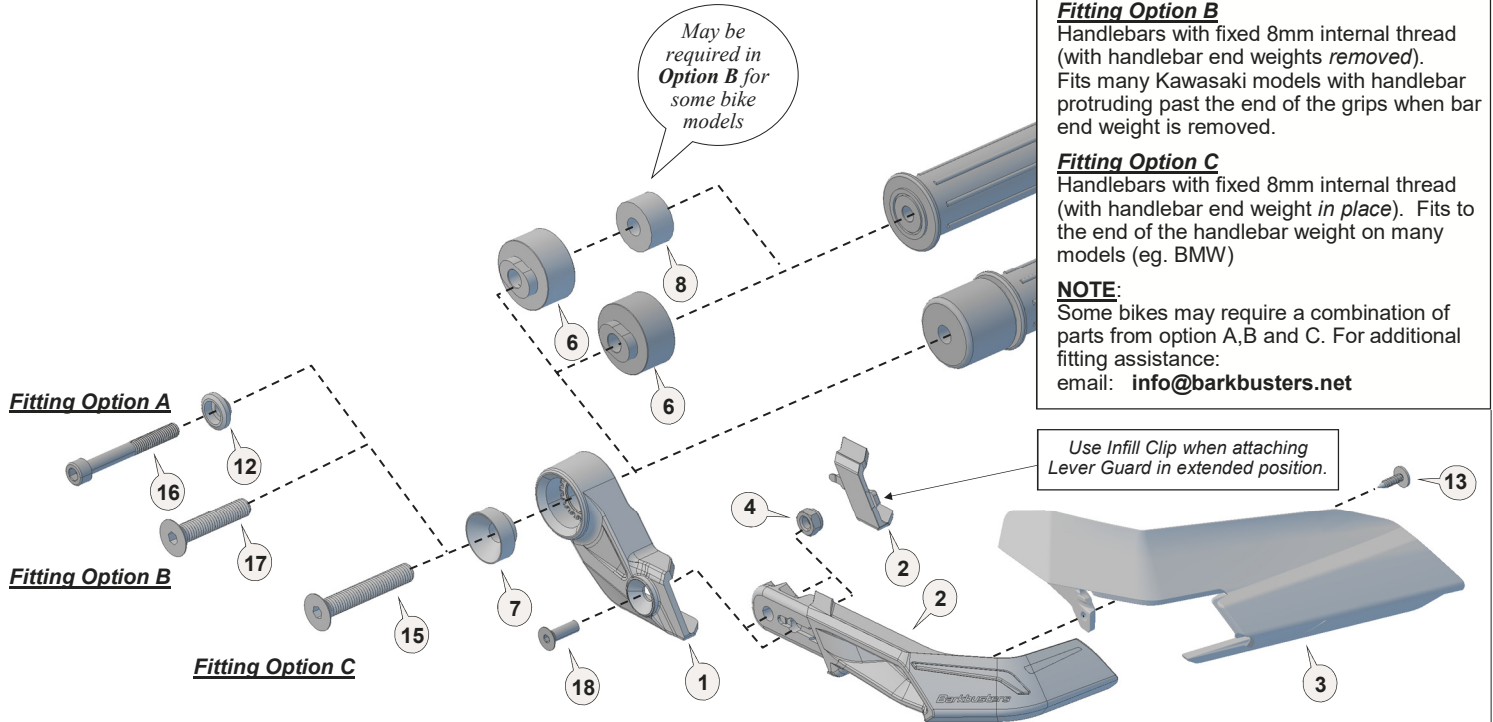








Installation for Hollow Handlebar

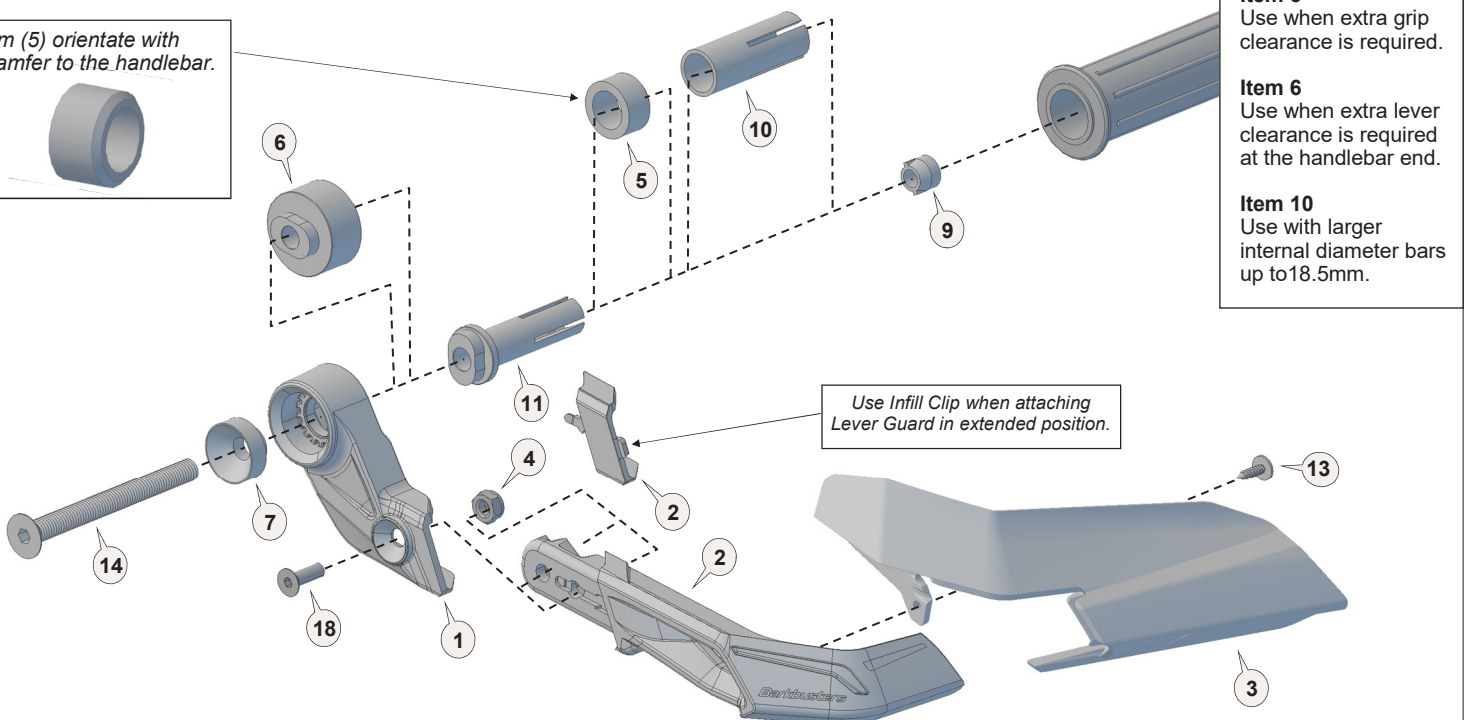


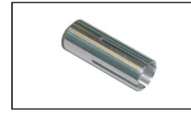

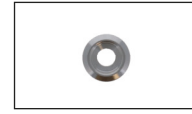
Installation for RIGHT Side.


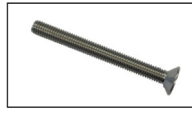
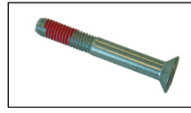
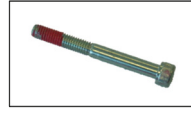
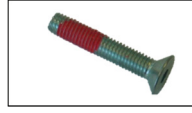

Repeat for LEFT side with applicable parts.

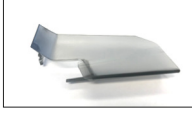Item (5) orientate with chamfer to the handlebar.



1 AERO-GP Bar End  PN: BE-AGP Pcs. 1 Left & 1 Right	2 AERO-GP Arm & Clip  PN: BLP-LR Pcs. Left / Right Set	3 AERO-GP Aerofoil  PN: BLP-WD Pcs. 1 Left & 1 Right	4 Nut 6mm  PN: M6LN-SS Pcs. 2	5 Spacer  PN: SP12-21-14 Pcs. 2	6 Locking Adaptor  PN: S7-LA2 Pcs. 2
--	--	--	--	---	--

7 Bar End Adaptor  PN: BEA01 Pcs. 2	8 Spacer  PN: S7-SP12 Pcs. 2	9 Taper Nut  PN: NUT12 Pcs. 2	10 Collet  PN: COLLET14-17 Pcs. 2	11 Inner Collet Locking  PN: ICL Pcs. 2	12 Bolt Adaptor  PN: S7-BA Pcs. 2
--	--	---	--	---	---

13 Screw  PN: M3.5X12PHBK Pcs. 2	14 Flat Head Bolt 80mm  PN: M8X80FHCSZP-FT Pcs. 2	15 Flat Head Bolt 50mm DRILOC  PN: M8X50FHCSZP-DL Pcs. 2	16 Socket Head Bolt 50mm DRILOC  PN: M6X50SHCSZP-DL Pcs. 2	17 Flat Head Bolt 40mm DRILOC  PN: M8X40FHCSZP-DL Pcs. 2	18 Flat Head Bolt 16mm  PN: M6X16FHCSZP-DL Pcs. 2
---	--	---	--	---	--

Important:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a qualified motorcycle service technician.

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.7 lbf ft)
M3.5	* DO NOT OVERTIGHTEN *

WARNING:

Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. This check should be performed with the steering straight and also when it is at left and right full lock. If the lever end touches the guard extra spacers may be required at the handlebar end mounting point. On some motorcycles the guard may touch the fairing and hinder steering function. If this occurs try attaching the lever guard in the extended forward position so it passes in front of the fairing. Do not ride the motorcycle with the guards installed if any controls are not operating correctly. Check periodically that all bolts are tight.

CAUTION:

Rideworx accepts no liability for damages caused by improper mounting. All bolts including all provided by Rideworx, should be tightened to the torque settings recommended by your motorcycle's manufacturer. If unavailable, use torque settings in the table provided. After the first 50km of riding check all bolts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

RIDEWORX

Email: info@barkbusters.net
Web: www.barkbusters.net

Barkbusters

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.